

Projector Controls

1 Select Display Source

- Projector will power on and screen will drop down
- Allow 30 sec for projector to “warm up”

2 Adjust Volume

- If sound can not be heard, try pressing **VOL UP** to activate the classroom speakers

3 Power Off Projector

- **PRESS AND HOLD PWR** for 5 sec to turn projector off
- **Mute** button will temporarily blank out screen and mute room audio

